

User Manual

Dishwasher

Fully integrated



TABLE OF CONTENTS

SAFETY INSTRUCTIONS

PRODUCT ACCESSORIES

PRODUCT INTRODUCTION

USING YOUR DISHWASHER

Dishwasher feature

Adding consumables

Operation panel

Water softener usage instructions

SAFETY INSTRUCTIONS

WARNING PROPER USE

When you use your dishwasher, follow the precautions listed below:

- ◆ Installation and repair work may only be carried out by a qualified technician.
- ◆ This appliance is designed for household use and similar applications, such as:
 - ✧ staff kitchens in shops, offices and other working environments.
 - ✧ Farm houses
 - ✧ by clients in hotels, motels and other residential type environments;
 - ✧ bed and breakfast type environments.
- ◆ Do not abuse, sit on, or stand on the door or dish rack of the dishwasher. Do not touch the heating element during or immediately after use.
- ◆ Do not operate your dishwasher unless all enclosure panels are properly in place. Open the door very carefully if the dishwasher is operating. There is a risk of water squirting out.
- ◆ Do not place any heavy objects on the door when it is open, or the appliance could tip forward.
- ◆ Use only detergent and rinse additives designed for an automatic dishwasher. Never use soap, laundry detergent, or hand washing detergent in your dishwasher.
- ◆ Keep children away from detergent and rinse aid, keep children away from the open door of the dishwasher, there could still be some detergent left inside.
- ◆ Dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with skin and eyes and keep children away from the dishwasher when the door is open. The door should not be left in the open position since this could present tripping hazard. This dishwasher is designed for normal house hold and indoor use.
- ◆ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. Please dispose of packing materials properly. Use the dishwasher only for its intended function.
- ◆ During installation, the power supply must not be excessively or dangerously bent or flattened. Do not tamper with controls. The appliance is to be connected to the water mains using new hose sets and the old hose-sets should not be reused.
- ◆ Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Please

unplug before cleaning the appliance.

- ◆ This appliance can be used by children 8 years of age or older and persons with restricted physical, sensory or intellectual capabilities or a lack of experience and knowledge, if they are observed by a responsible person or if they have received instructions on how to use the appliance safely, and understand the associated hazards.
- ◆ Children may not play with the appliance. Children may only clean and maintain this appliance under supervision.
- ◆ This appliance must not be used by persons (including children) with reduced physical, sensory or intellectual capabilities or a lack of experience and knowledge, unless they are supervised or have received instruction in the safe use of the appliance and understand the associated hazards.
- ◆ The packaging material may be dangerous for children!
- ◆ This appliance is solely intended for indoor use. To protect yourself from the risk of electric shock, do not immerse the appliance, cord or plug in water or other liquids.
- ◆ Use a soft moistened cloth with mild soap and then wipe off the appliance with a dry cloth.
- ◆ Make sure that the detergent dispenser is empty when the wash cycle is complete.
- ◆ A maximum of 15 place settings fit in the dishwasher.
- ◆ The maximum permissible water supply pressure is 1 Mpa.
- ◆ The minimum permissible water supply pressure is 0.04 Mpa.

Earthing instructions

- ◆ This appliance must be earthed. In the event of a malfunction or fault, earthing reduces the risk of electric shock by providing the path of least resistance to the electric current. This appliance is equipped with an earthing plug.
- ◆ The plug must be plugged into an appropriate outlet that is installed and earthed in accordance with all local regulations and ordinances.
- ◆ There is a risk of electric shock if the earthing conductor is not connected properly.
- ◆ Consult a qualified electrician or service representative if you are in doubt as to whether the appliance is properly earthed.
- ◆ If the plug supplied with the appliance does not fit into the outlet, it must not be modified.
- ◆ In this case, a qualified electrician should be invited to install the appropriate power socket.

PRODUCT ACCESSORIES



Saltfiller



Water supply
pipe

Dishwasher
Fully integrated




Dishwasher
instuctio

User Manual



Hanging Panel
Installation Guide

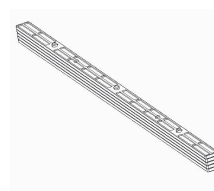


Hanging plate
adjustment
gasket

PRODUCT INTRODUCTION

Product size

- ◆ Powersupply: 220-240V~, 50/60Hz
- ◆ WaterPressure: 0.04Mpa~1.0Mpa
- ◆ ProductDimension: (WxDxH) 598mmx570mmx845mm
- ◆ Specifications are subject to change without notice.

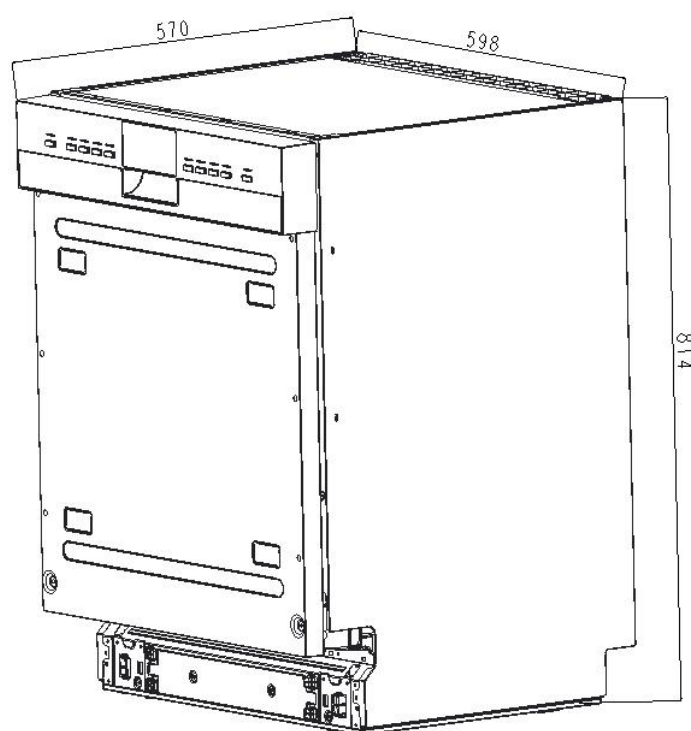

Note


The picture is for reference only. The actual situation may vary depending on the model. Please be aware of this.

USING YOUR DISHWASHER

Important note

To fully utilize the performance of the dishwasher, please carefully read the operation manual before your first use.

Dishwasher feature

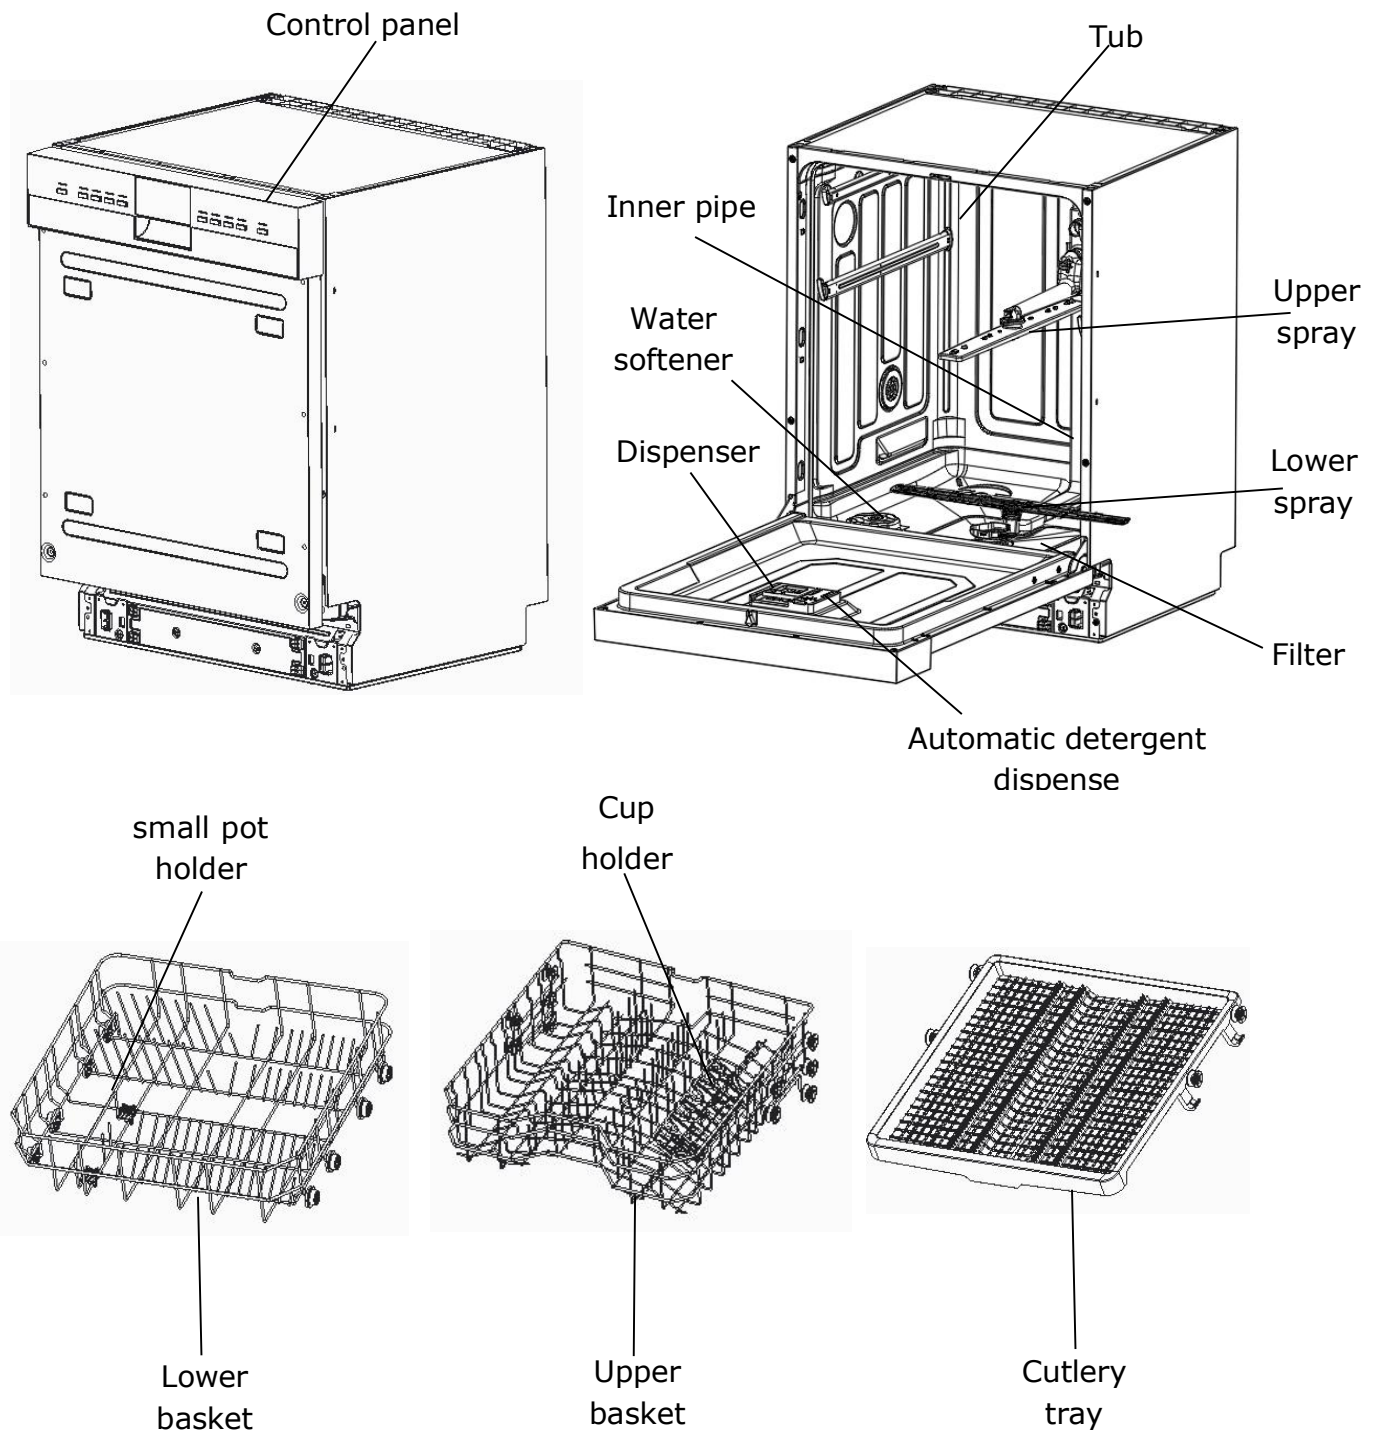

USING YOUR DISHWASHER

Adding consumables

Notes: When using the dishwasher for the first time, 0.8 liters of tap water and 50 grams of special salt should be added to the salt chamber of the water softener. At the same time, Rinse aid be added to the dispenser.

Consumable item name	Wash addition	Supplementaldose
Detergents	Everytime	Add15-35grams dependingon the number of utensils
Salt	 Add when indicator light is on	Top up
Rinse aid	 Add when indicator light is on	Top up

Water softener usage instructions


Notes:

Only use the salt designed for dishwashers.

Filling salt into the water softener

USING YOUR DISHWASHER

Operation panel

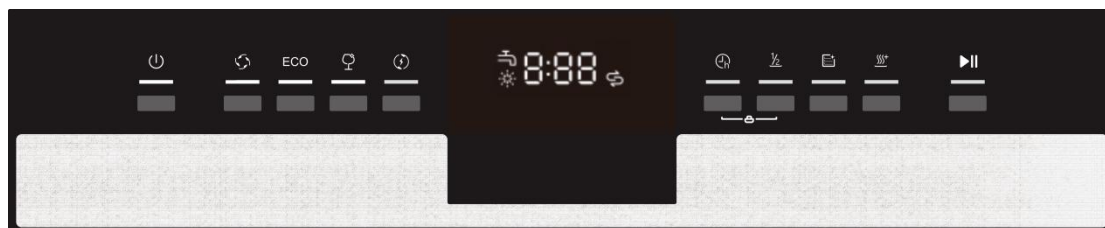

Operation (button)



Power button

Press this button to switch on your dishwasher. The display will light up.



Intensive

For heavily soiled items, such as pots and pans. With dried-on food residues.



ECO

This is the standard program, which is suitable for normally soiled items, such as pots, plates, glasses and lightly soiled pans.



Glass

For lightly soiled dishes and glass.



Rapid

A shorter washing time for lightly soiled items that do not need to be dried.



Delay

Press this button to set the start delay time. You can delay the start of the next wash cycle by up to 24 hours. A single press of this button delays the start of the wash cycle by one hour.



Half load

For selecting the "half load" function. (You can only use this function if you only have about 6 place settings or less. This function consumes less water and energy. Can only be used with Intensive, ECO and Glass). If you press this button, the corresponding indicator will light up.

USING YOUR DISHWASHER



Extra drying

better drying result. (It can only be used with Intensive, ECO, Glass and 90 min.)




Strong wash

To wash very dirty, hard to clean dishes. (It can only be used with Intensive, ECO, Glass and 90 min.)



Start/ Pause

Press the button to start the selected washing program or pause the working program.

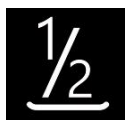

Child lock

This option allows you to lock the buttons on the control panel, so children cannot accidentally start the



dishwasher by pressing the buttons on the panel. Only the

Power button remains active To lock or unlock the buttons on the control panel, press the button for 3 seconds simultaneously.

The screen LED display light instructions



Displays the program, timer, error codes, etc.



Rinse aid

If the indicator lights up, this means that the dishwasher has too little rinse aid and it must be refilled.




Salt

If the indicator lights up, this means that the dishwasher has too little salt and it must be refilled.

1.Lower basket


Place the dishes correctly according to the position and method shown. After the dishes are placed,ensure that the rotating spray arm will not touch the dishes or cutlery.

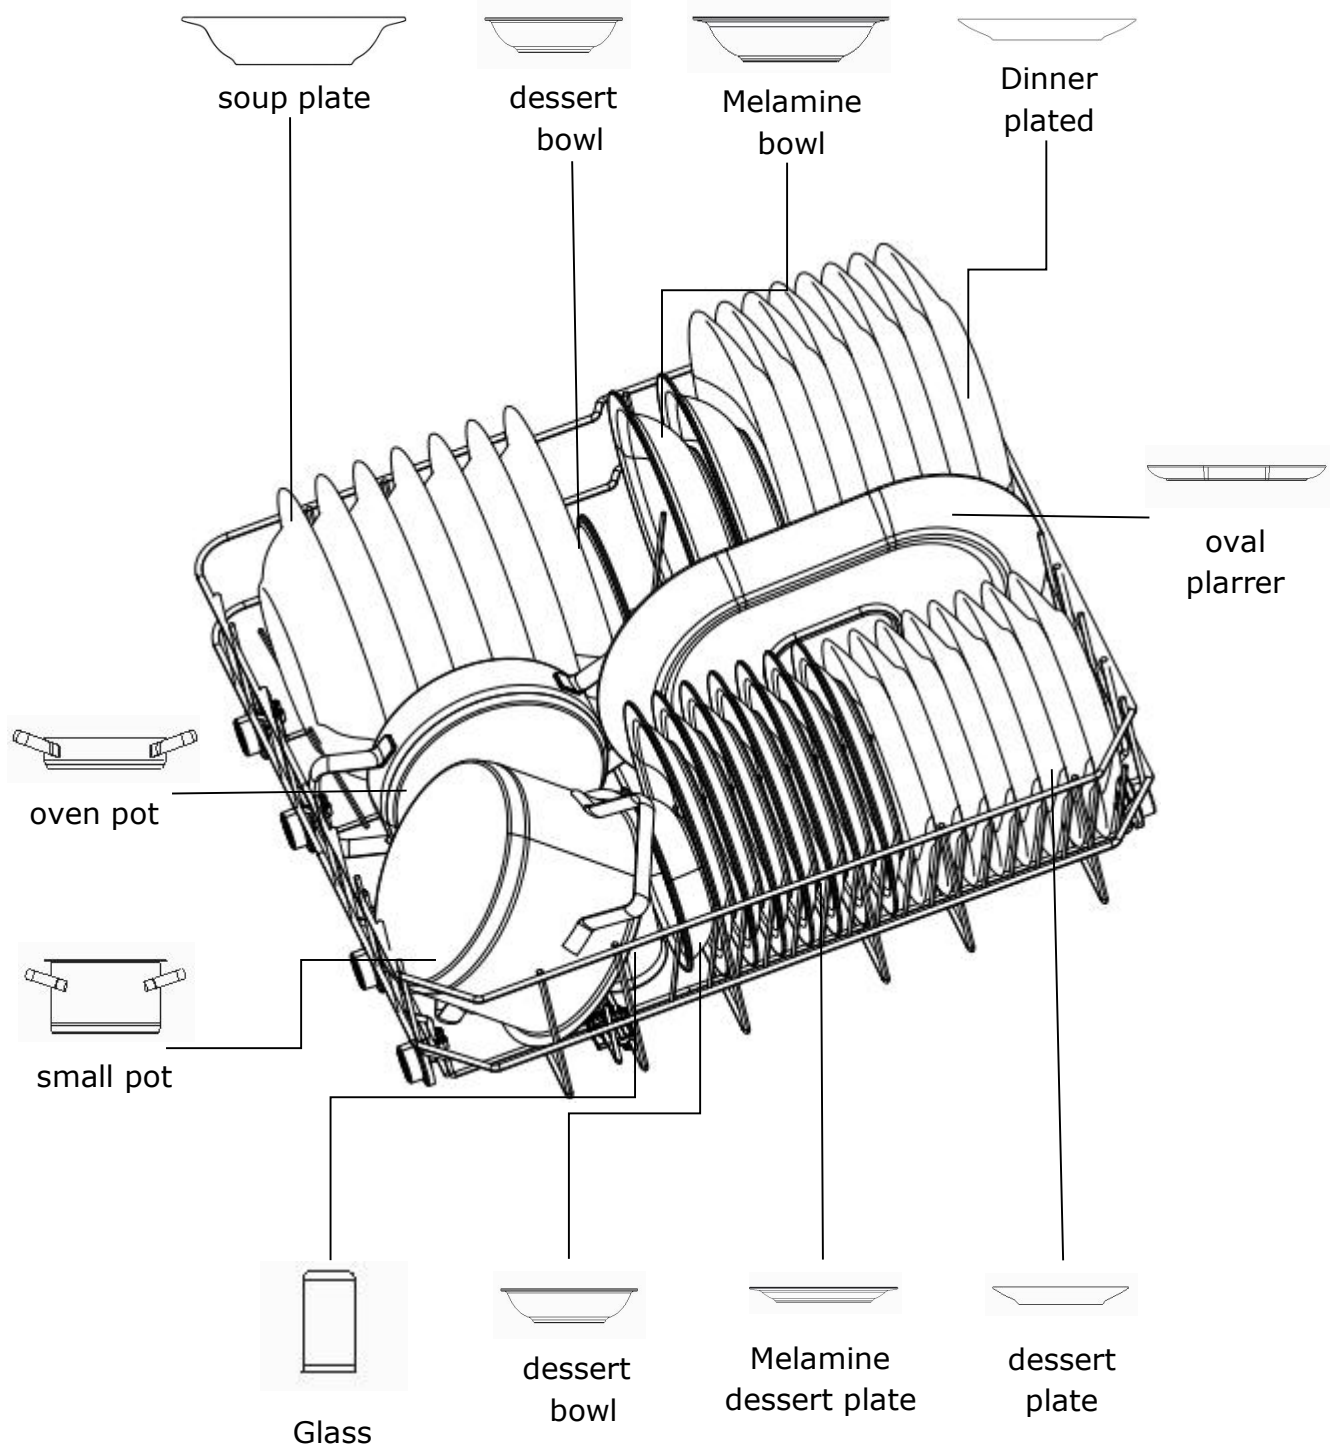

2.Upper basket

The low rack is mainly placed with saucers, mugs and glasses. Place correctly according to the position and method shown.

The tilt Angle ensures that water can flow away from the bottom of the dish. Place the cup side down.

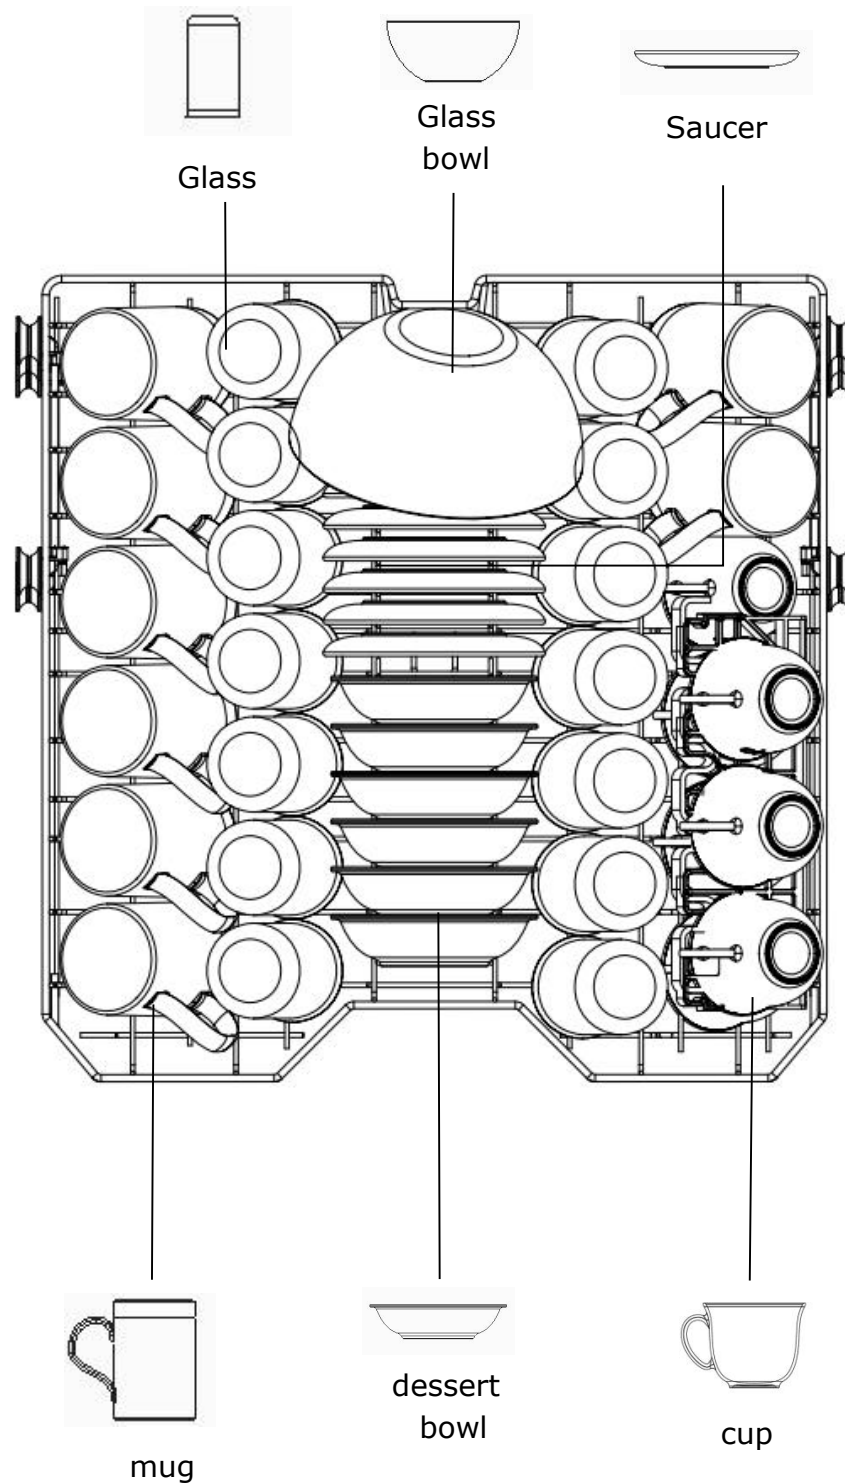

3. Cutlery tray

Place correctly according to the position and method shown.

